

INSTRUCTION SHEET



E4.75 RA/SA C3 INSTALLATION

689-0611


PAGE 1 OF 2

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

1. MOUNT FRAME


SPREAD HANGER BARS AND MOUNT TO CEILING STRUCTURE WITH FASTENING HARDWARE SUPPLIED BY OTHERS. ADJUST HEIGHT BY LOOSENING NUT ON THE INSIDE OF THE HOUSING.

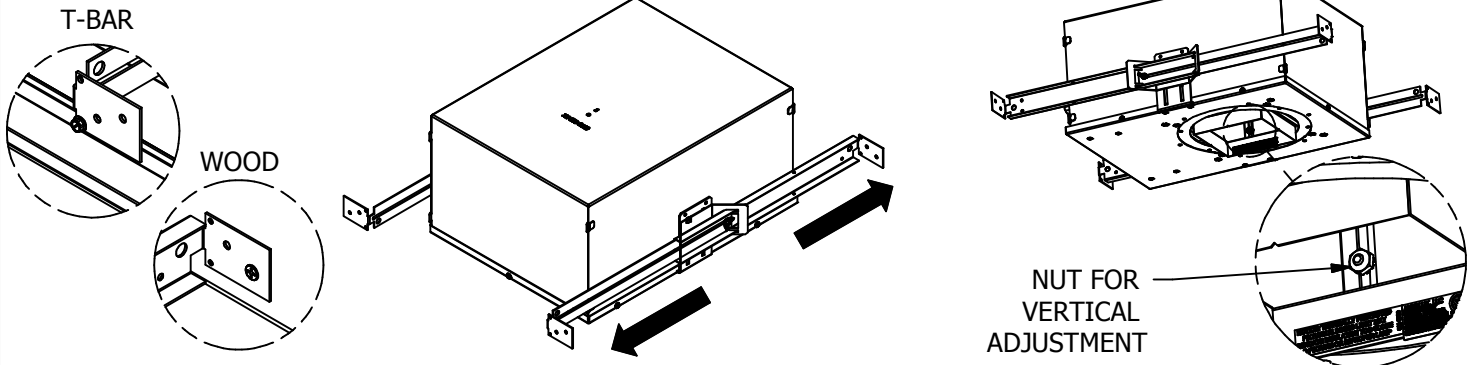

2. MAKE ELECTRICAL CONNECTION

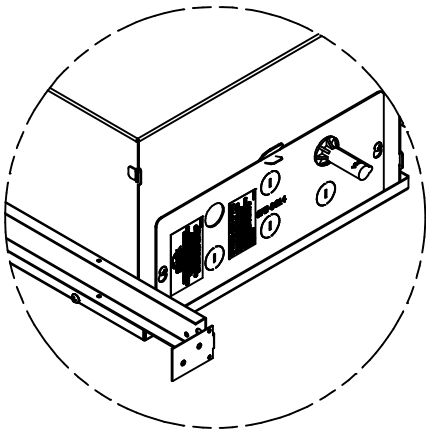


3a. CUT HOLE IN CEILING

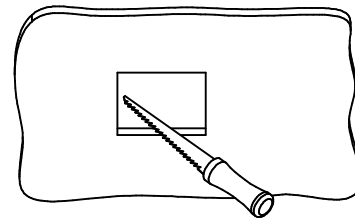


CEILING CUTOUT	
FIXTURE	DIMENSION
ROUND (RA)	Ø5 3/8"
SQUARE (SA)	5 1/4" x 5 1/4"
ROUND TRIMLESS (RA-TL)	Ø5 7/8"
SQUARE TRIMLESS (SA-TL)	5 7/8" x 5 7/8"

3b. INSTALL MUD RING (TRIMLESS ONLY)

ATTACH MUD RING TO CEILING WITH SCREWS, THEN COVER WITH A THIN LAYER OF FINISH PLASTER

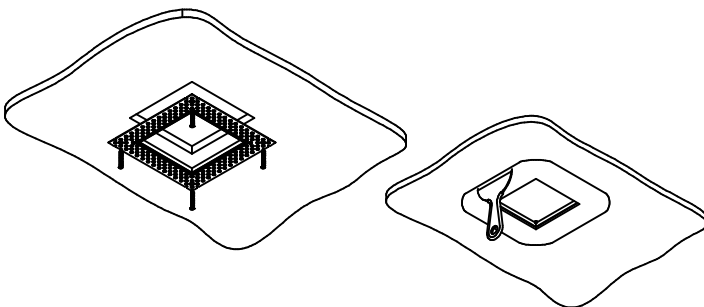

4. INSERT TRIM

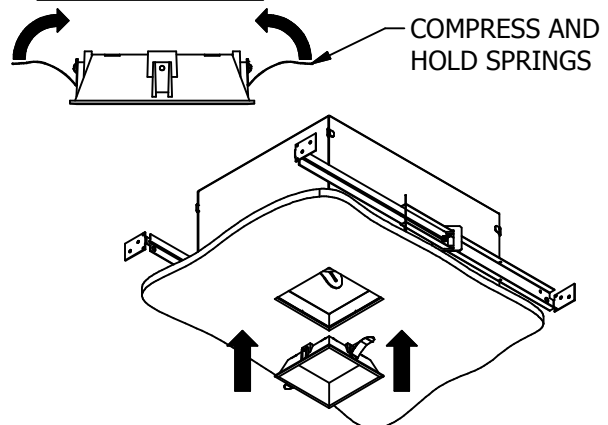

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com

REVISION

DATE

APPROVED

INSTRUCTION SHEET



E4.75 RA/SA C3 MAINTENANCE

689-0611


PAGE 2 OF 2

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.



1. REMOVE TRIM

MAINTENANCE OF OPTICAL HEAD AND DRIVER REQUIRES REMOVAL OF TRIM

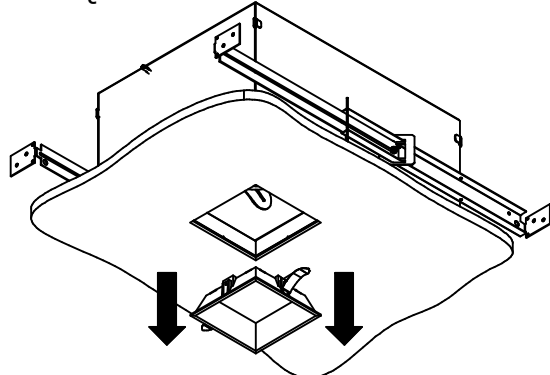


2. OPTICAL HEAD ADJUSTMENT

360° ROTATION, 0-35° TILT

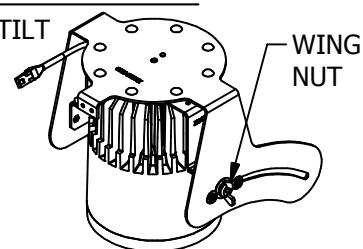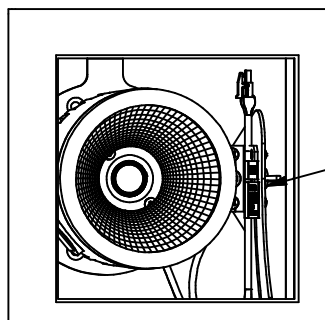


LOOSEN WING NUT
ADJUST TO DESIRED
TILT ANGLE.
RETIGHTEN WING NUT.
REINSTALL TRIM

3a. OPTICAL HEAD REMOVAL


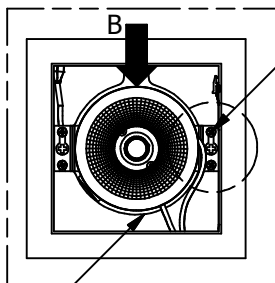


A. LOOSEN
4X SCREWS.
DO NOT
REMOVE
COMPLETELY

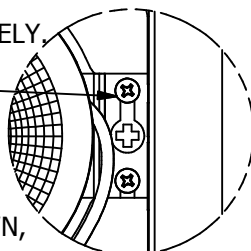


B. SLIDE OPTICAL HEAD AS SHOWN,
THEN PUSH UP TO RELEASE HEAD.
REMOVE HEAD FROM FIXTURE.

3b. DISCONNECT HARNESS

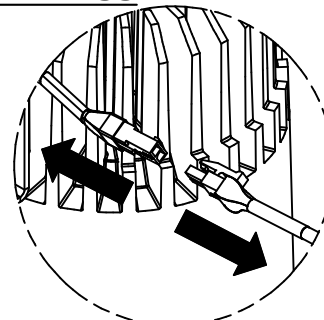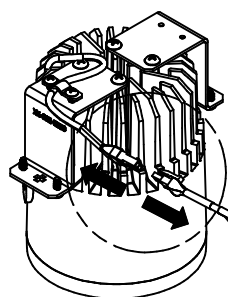

WARNING:
DO NOT USE WIRE HARNESS AS A HANGING DEVICE
AS IT MAY CAUSE DAMAGE TO THE FIXTURE OR
PERSONAL INJURY.

4. DRIVER ACCESS

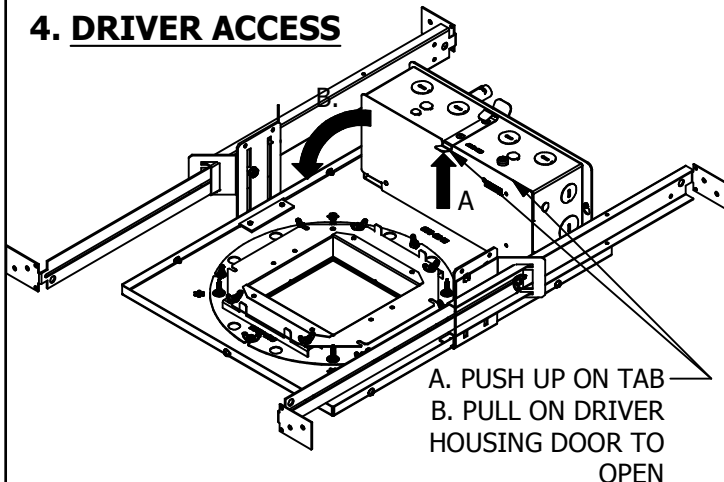

A. PUSH UP ON TAB
B. PULL ON DRIVER
HOUSING DOOR TO
OPEN

5. REASSEMBLE IN REVERSE ORDER

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com