

INSTRUCTION SHEET



INSTRUCTION SHEET, SOLACE LED DRIVER REPLACEMENT

689-0875


PAGE 1 OF 1

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

LED DRIVER COMPARTMENT ACCESS AND LED DRIVER REPLACEMENT.


DISCONNECT AND REMOVE LED MODULE FOR EASIER ACCESS TO THE LED DRIVER COMPARTMENT.
LOOK INSIDE THE HOUSING FOR THE YELLOW LABEL "PULL TO ACCESS LED DRIVER".

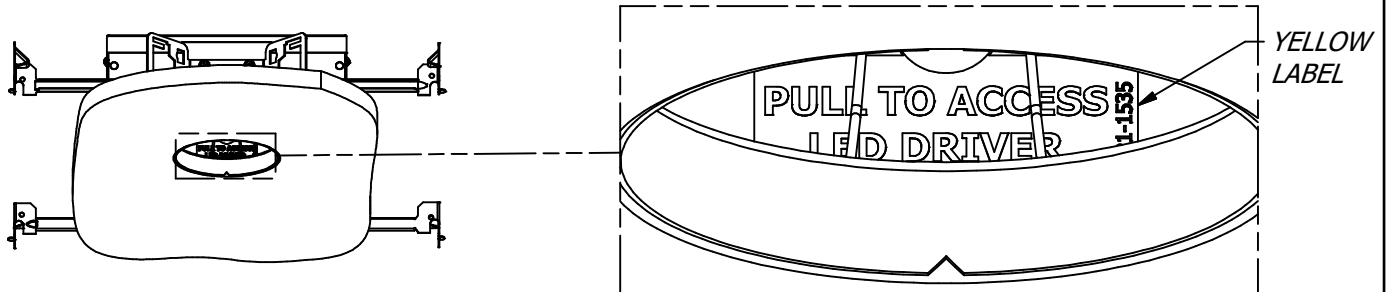

PULL THE CLIP TO OPEN THE LED DRIVER COMPARTMENT DOOR.

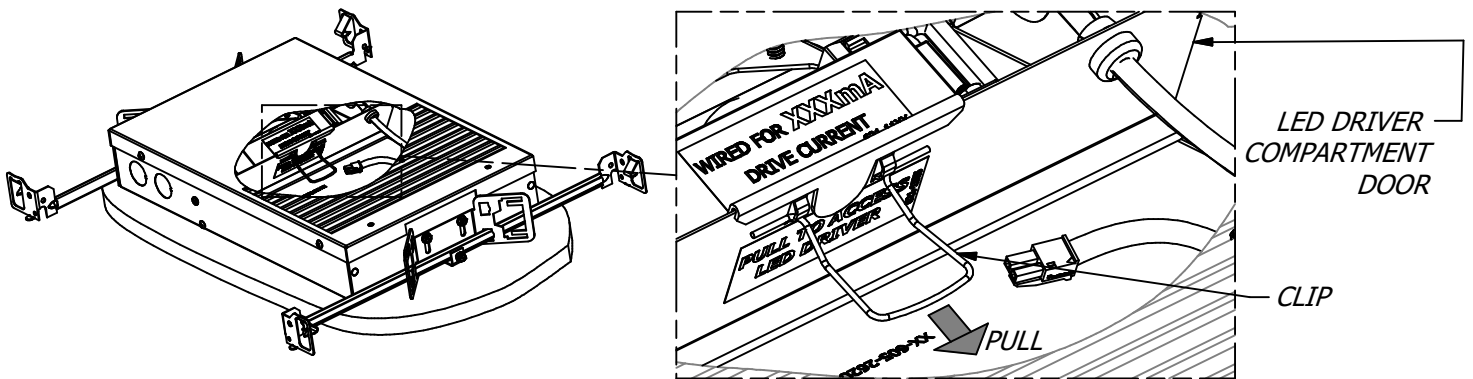

WHEN LED DRIVER COMPARTMENT DOOR IS IN HORIZONTAL POSITION, SLIDE THE LED DRIVER BRACKET OUT OF THE DOOR AND THEN PULL OUT OF THE HOUSING. DISCONNECT PRIMARY AND SECONDARY DRIVER WIRES.

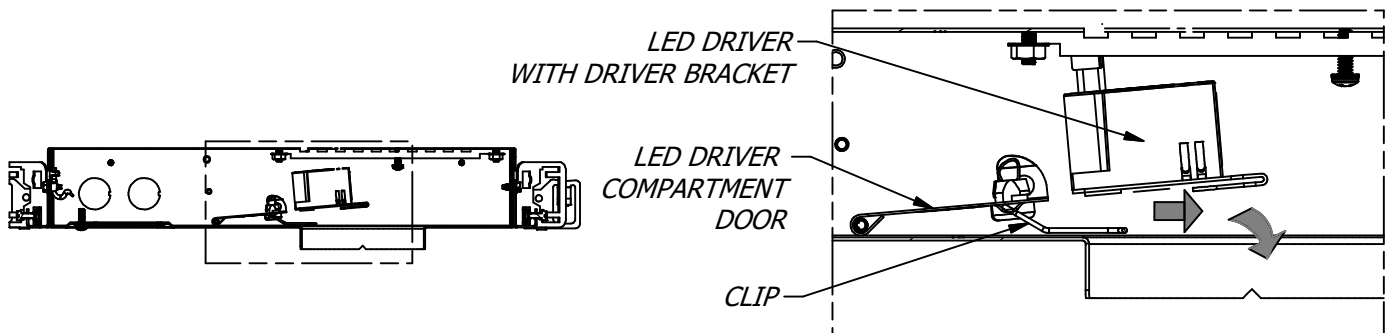

INSTALL NEW LED DRIVER ONTO THE DRIVER BRACKET. RECONNECT DRIVER WIRES, THEN SLIDE NEW DRIVER ONTO THE LED DRIVER COMPARTMENT DOOR. PUSH ALL WIRES DEEP INTO THE DRIVER COMPARTMENT AND THEN PUSH LED DRIVER DOOR UNTIL IT CLICKS INTO POSITION VERTICALLY.

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com