

INSTRUCTION SHEET

amerlux HDL-HP-A14/A17 AND HSE STANDARD/REMODELER TRIM/TRIMLESS OPTICAL HEAD INSTALLATION

689-0510


PAGE 1 OF 2

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING. RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

HDL-HP-A14/A17

HDL-HP-LENSED-A16/A17


HSE

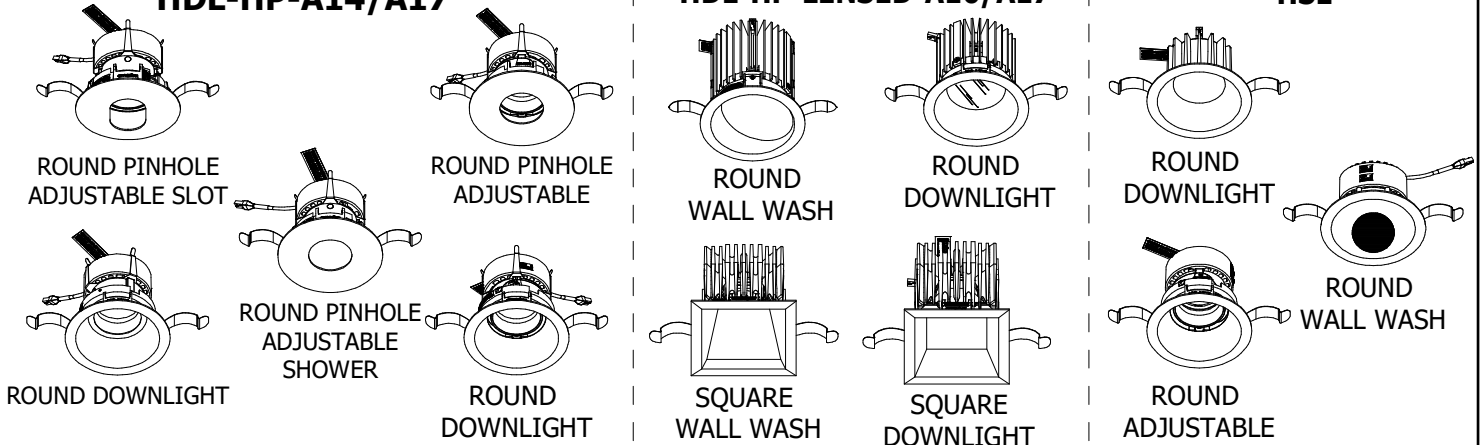

NOTE: HDL-HP-A14/A17, HDL-HP-LENSED-A16/A17 AND HSE FOLLOW SAME INSTALLATION PROCEDURE

1. MAKE ELECTRICAL CONNECTION

DO NOT SUPPORT TRIM ASSEMBLY WEIGHT USING QUICK CONNECT HARNESSES.

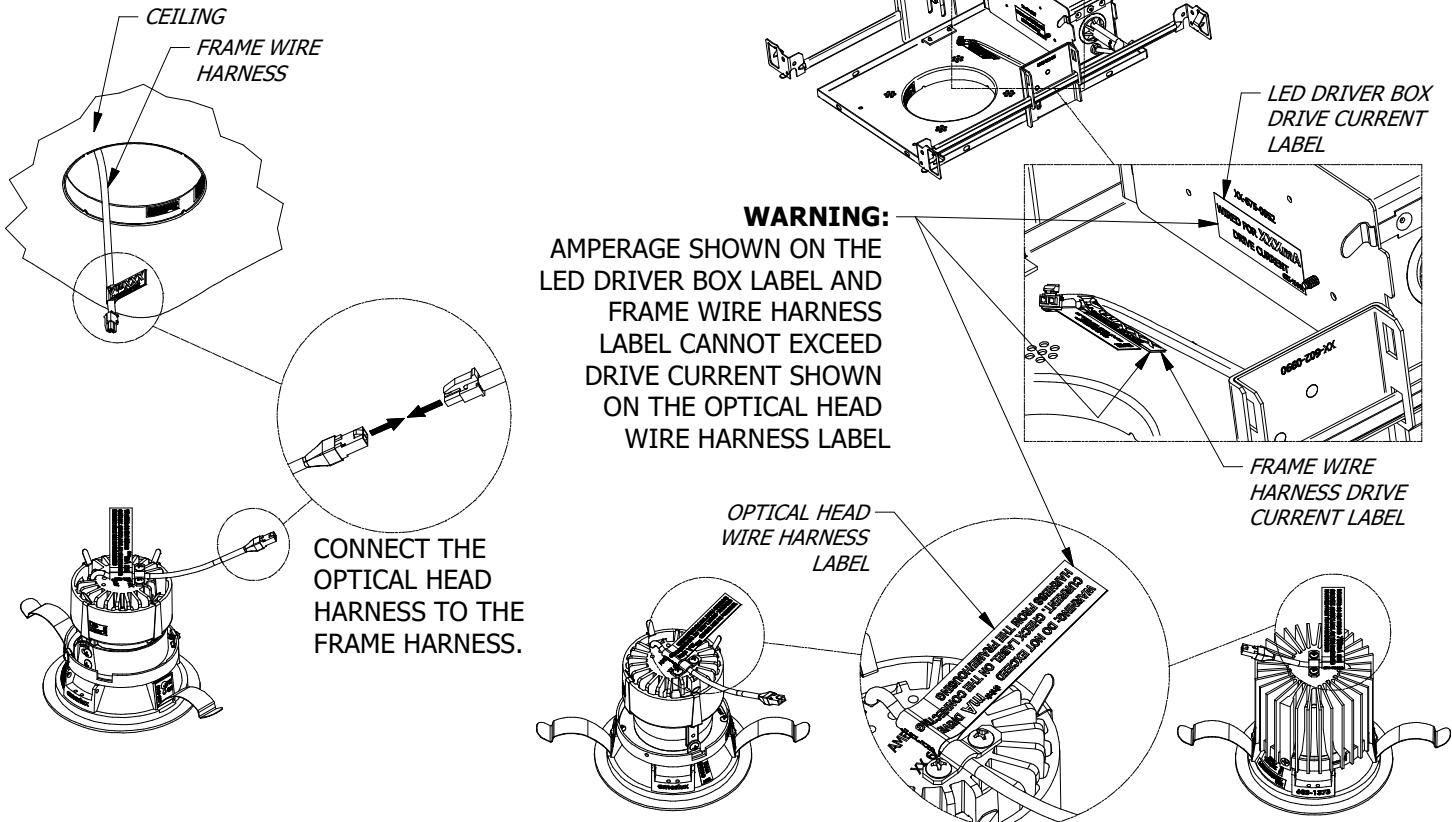

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com

INSTRUCTION SHEET


HDH-HP-A14/A17 AND HSE
STANDARD/REMODELER TRIM/TRIMLESS
OPTICAL HEAD INSTALLATION

689-0510

PAGE 2 OF 2


WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.
RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

2. SPRING CLIPS

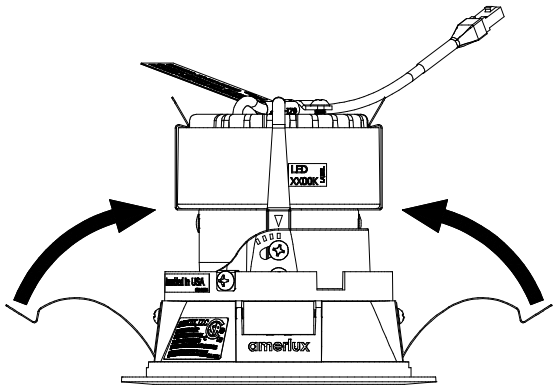

COMPRESS AND HOLD 2X SPRING CLIPS.


3. INSERT OPTICAL HEAD

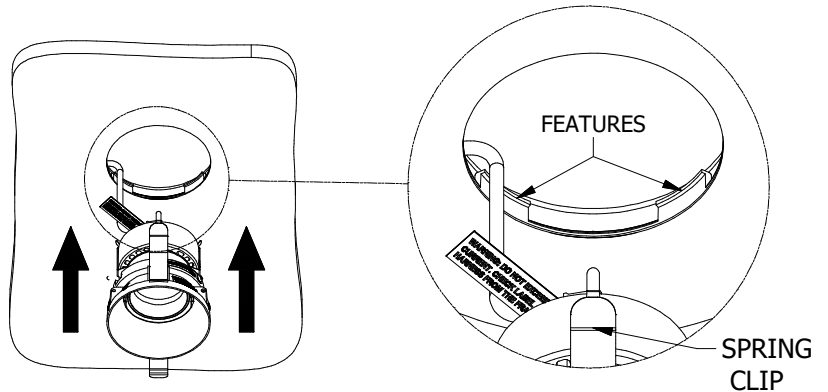


INSERT OPTICAL HEAD
INTO CEILING CUTOUT.

**NOTE: FOR ROUND TRIMLESS STYLES
ENSURE SPRING CLIPS ARE
ALIGNED BETWEEN FEATURES.**

TILT ADJUSTMENT

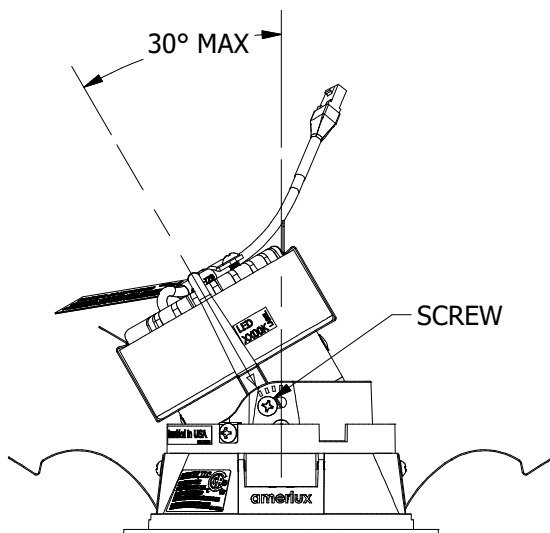

ROTATION ADJUSTMENT

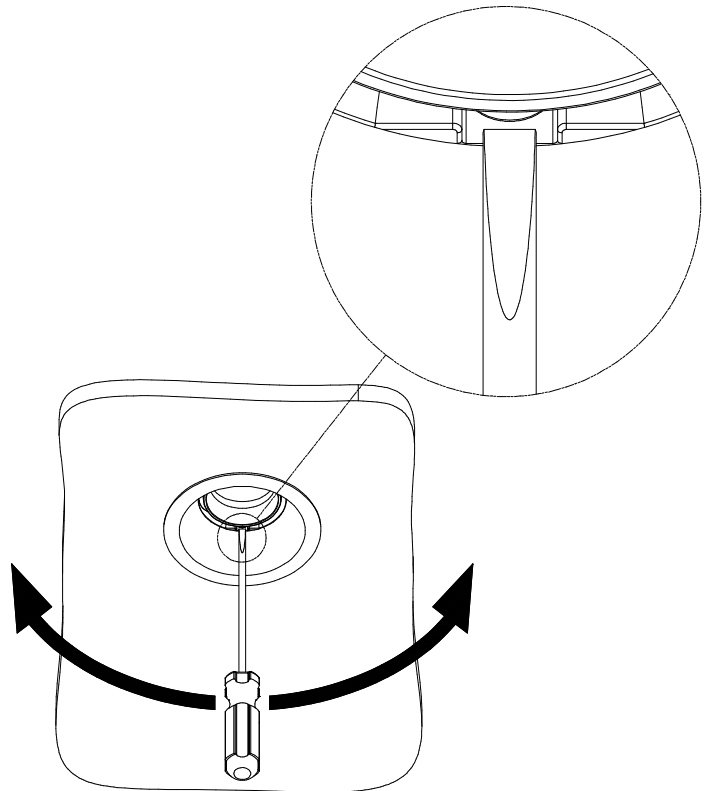

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com