

INSTRUCTION SHEET









CLASSIX, CLX-RA6-C3

689-0812

PAGE 1 OF 2

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.

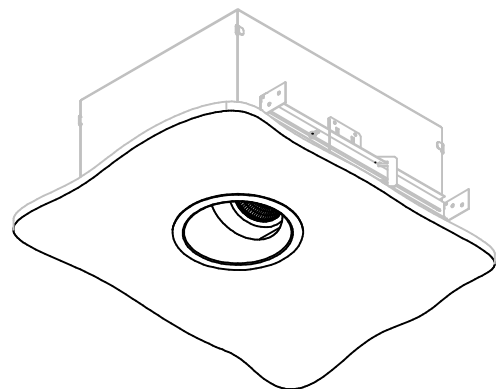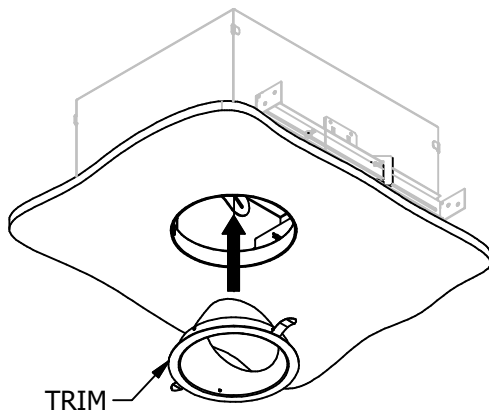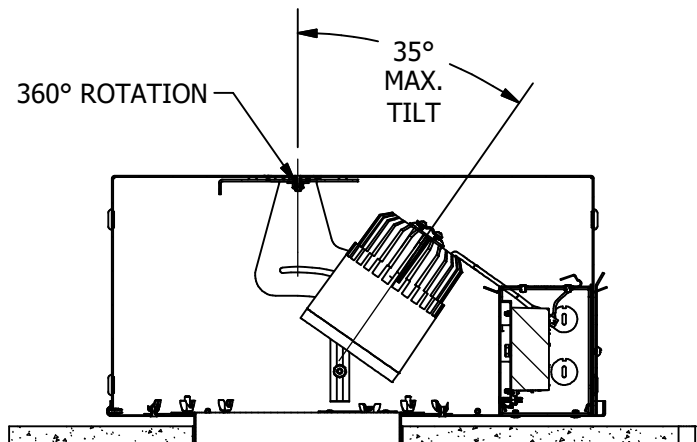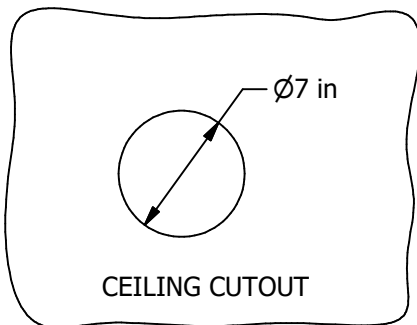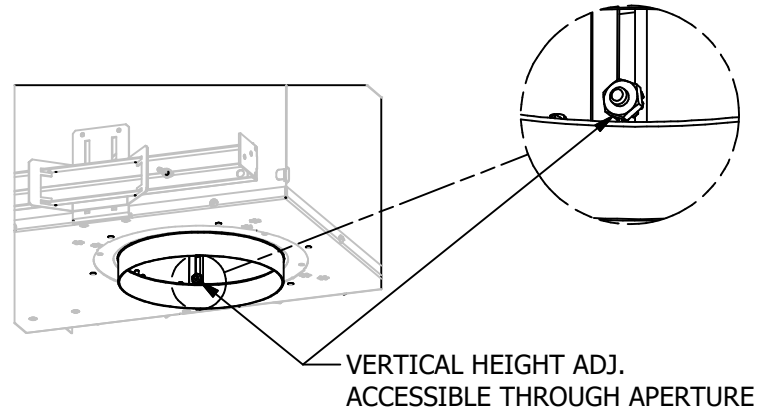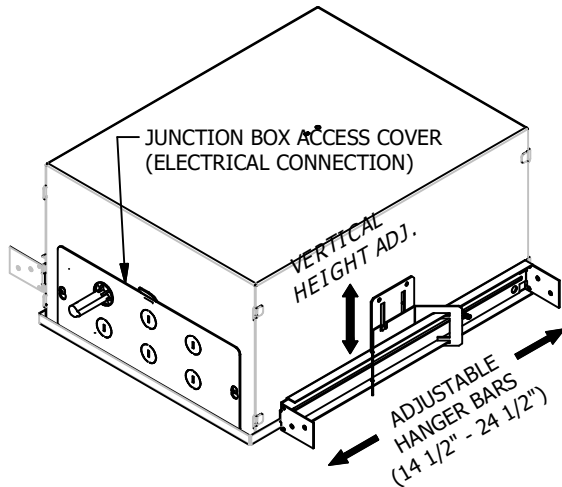

Amerlux, 178 Bauer Drive, Oakland, N.J. 07436, T: 973-882-5010, F: 973-882-2604 www.amerlux.com

REVISION

DATE


APPROVED

WARNING - RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY. FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL SPECIFICATIONS. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

RETAIN THESE INSTRUCTIONS FOR MAINTENANCE REFERENCE.



DRIVER ACCESS

1. ACCESS DRIVER MOUNTING PLATE THROUGH AN APERTURE.
2. PULL DRIVER PLATE THROUGH AN APERTURE.

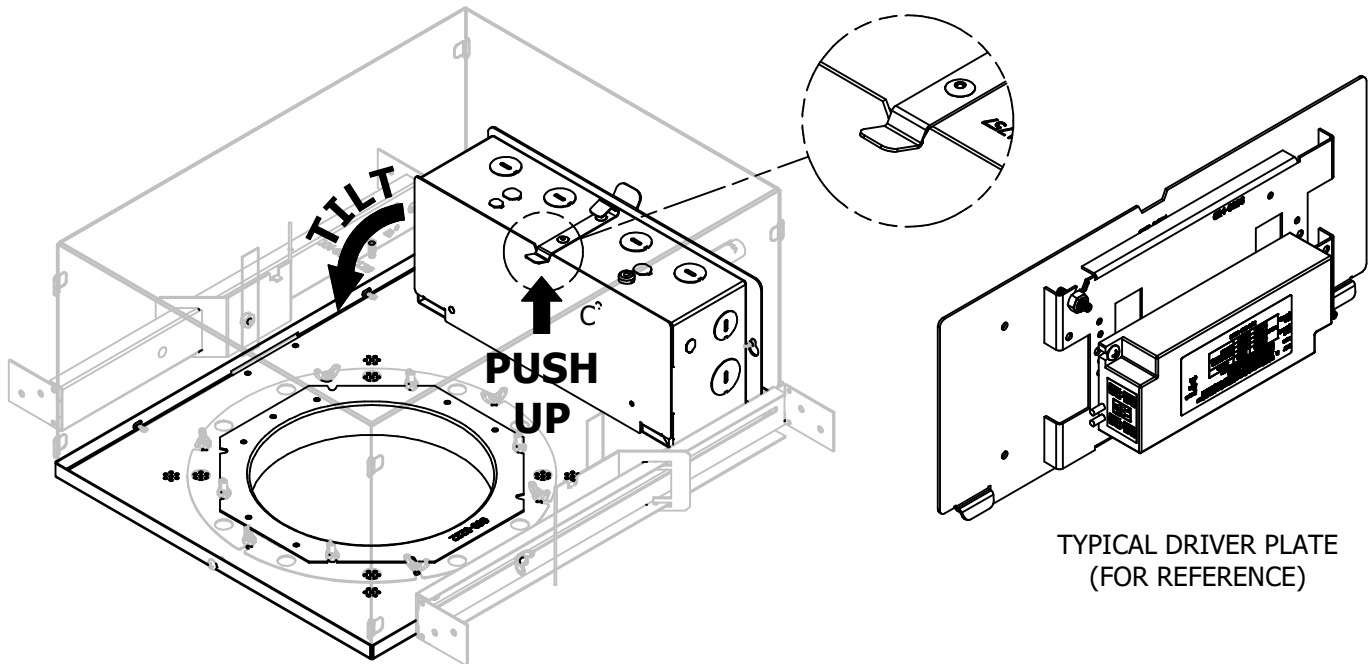

LED ENGINE ACCESS

1. ACCESS LED ENGINE THROUGH AN APERTURE.
2. LOOSEN 4X SCREWS THEN SLIDE OUT THE ENGINE.
3. REMOVE ENGINE THROUGH AN APERTURE THEN DISCONNECT HARNESS.

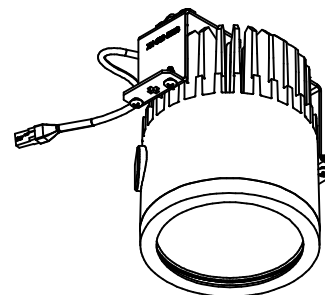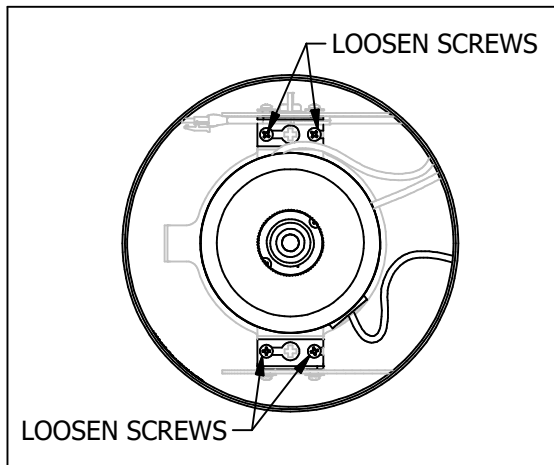

LED ENGINE